

# PHILIP KUBICKI

## CLASP SPRING REPLACEMENT INSTRUCTIONS

### REMOVE CLASP

1) Hold the clasp arm in place and remove bolt with a 1/8" allen wrench. Do not be alarmed if it is hard to turn. Loctite (a metal adhesive) is used to keep the bolt from working loose.

2) Lift clasp arm up and pull out.

**Note:** There is a small washer in the mounting flange which should be left in place.

### INSTALLATION OF CLASP ARM/SPRING ASSEMBLY

1) Push bolt installation tool through the clasp arm hole.

2) Place spring into clasp arm then screw the bolt tool into the mounting flange on the neck.

3) Slide the clasp arm down the bolt tool until the spring leg enters approximately 1/4" into the flange hole.

4) Pivot clasp arm up above the fingerboard and press clasp arm all the way onto the bolt tool. Wiggling the clasp arm up and down while pushing it on will help if it is hard to seat.

5) Once the clasp arm is on all the way, lower the arm into the fingerboard recess. Remove bolt tool.

6) Apply "Loctite" metal adhesive to thread of clasp bolt and reinstall.