


Dear Factor™ Player

Thank you for purchasing our Ex Factor bass strings. I feel they are the best available, and are the only strings designed specifically for your Ex Factor.


Removing strings from your Ex Factor™ Bass:

1. Place bass on a clean flat surface.
2. Rotate the tuning knob counterclockwise until it stops.
3. Lift the string off of the saddle screw to further reduce string tension.
4. With your first finger on the ratchet head and you thumb on the stringwheel, pinch the ratchet head towards the stringwheel, controlling the spin of the wheel with your thumb while pulling the string off with your left hand.

Note: *If the stringwheel won't release, reduce string tension by rotating the stringwheel towards the tuning knob while pressing the ratchet head down.*

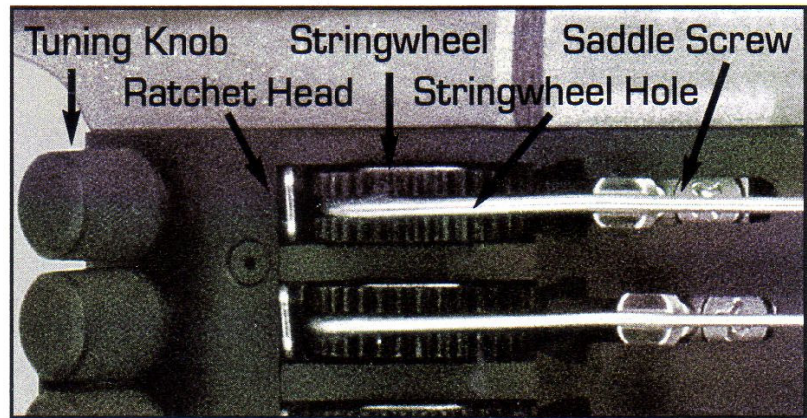

Installing strings on your Ex Factor™ Bass

1. Place bass on a clean, flat surface.
2. With the tuning knob completely unwound (ratchet head exposed), insert the tail end of the string all the way into the stringwheel hole. Bend the string against the hole towards the saddle screw.
3. Remove the string from the wheel and bend it like this: 
4. Re install the tail into the wheel. Rotate the wheel towards the tuning knob, placing the ball end into the retainer on the headstock.
5. Rotate the stringwheel toward the tuning knob until all of the string slack is taken up (the string should be off of the saddle).
6. Lift the string onto the saddle screw and turn the tuning knob until the string reaches pitch.

Note: *DO NOT force the tuning knob once it has come to the end of its travel. If the tuning knob stops turning before the string is in pitch, simply unwind the tuning knob all the way, and rotate the stringwheel an extra click or two before placing the string back on the saddle screw. It should now tune up to pitch using the tuning knob.*

P H I L I P K U B I C K I T E C H N O L O G Y
(805) 963-6703 www.kubicki.com